



DISC JOCKEY™

USER MANUAL

Disc Golf Bluetooth Speaker & GPS

Package Includes

- 1x Disc Jockey Speaker
- 1x USB-C cable
- 1x User Manual
- 1x Disc Golf Bag Strap

Overview of Speaker

Volume/Previous song

Play/Pause/Phone call

Volume+/Next song

Power on/off

USB Type-C Charging Port

Reset Hole (below cover)

Bushnell button

UDISC THE APP FOR DISC GOLFERS

UDisc and all related names, logos, product and service names, designs and slogans are trademarks of the UDisc, LLC

GETTING STARTED

Power On
Press button until you hear a rising tone and the LED indicator light is on.

Power Off
Press button until you hear a descending tone and the LED indicator light is off.

Bluetooth Connection
Make sure the Disc Jockey is within 10 meters from your portable device.

1. Press button until you hear a rising tone and the LED indicator light is blinking a blue light.
2. Go to the Bluetooth settings on your portable device, find and select "Disc Jockey" from the list of available devices.
3. Once paired, the LED indicator light will be a solid blue light.

Bushnell Button

1. Download the UDisc app on your portable device.
2. Pair the Disc Jockey's Bushnell Button in the UDisc app by opening the settings menu in UDisc (can be done within a scorecard or outside a scorecard). In the settings menu, select "Bushnell Disc Jockey" and follow the on-screen instructions.
3. Now your Disc Jockey is connected to the UDisc app. This will enable the Bushnell Button to give you an audible distance to the basket when pressed.

Bluetooth Disconnection
Press buttons simultaneously until LED indicator is quickly blinking a blue light to disconnect the current connected device and go into a new Bluetooth pairing mode.

IPX5 Water-Resistant Feature
This Speaker is IPX5 Water-Resistant for rainfall, spills, or water jets, but do NOT submerge it in water or liquids.

IMPORTANT NOTE: Ensure the USB charging port cover is closed tightly to best protect the speaker against water.

Resetting the speaker
If the function buttons are not working, disconnect the charging cable and place a small pin into the reset hole and hold for two seconds until the LED light is off.

Note:

- When powering on, the speaker automatically reconnects to the last mobile device it was connected to. (The speaker can pair with up to eight devices).
- To conserve power, the speaker will automatically shut down after 15 minutes in pairing mode if no devices are paired or after 2 hours of no activity.

Charging

- 1.Before first time use, fully charge the built-in battery.
- 2.Connect the USB-C Cable (included) between the Charging port on the speaker, and a USB port on a computer or USB AC Adapter.

LED Indicator	Battery Status
Flash Blue & Green	Low battery (<10%)
Solid Red	Charging
Red Off	Full charged

Note: When the battery charge <3%, the speaker will power off automatically.

Music Control

Play/Pause Click

Volume Up Click

Volume Down Click

Next Track Press & Hold

Previous Track Press & Hold

Bluetooth Pairing mode Click

Speakerphone (in Bluetooth Connection)

Answer an incoming call Click

Reject an incoming call Press & Hold

End the current call Click

Redial last-called number Press & Hold

Specifications

- Bluetooth Version: 5.0
- Suport:A2DPV1.2,AVRCPV1.4,HPV1.6,HSPV1.2
- Bluetooth distance:10 meters
- Rated Power: 3W
- Driver Unit: φ40mm (4Ω,5W)
- Frequency response: 180Hz-15kHz
- Signal-to-noise ratio: >80dB
- Battery type: Li-polymer (3.7V/900mAh)
- DC input voltage/current: 5V /1A
- Playtime: 10 hours (varies by volume level and content)
- Battery charge time: 2 hours
- Total harmonic distortion:≤10%
- Dimensions: 82*82* 39 mm
- Weight: 119g

Caution:

- Keep the speaker and accessories out of reach from children as they may be a choking hazard.
- Keep the speaker away from fire, water, liquids, extreme heat and strong magnetic fields.
- Do NOT use this speaker at high volume for an extended period of time as it may cause permanent hearing damage or loss.
- Do NOT drop knock the speaker on hard surfaces.
- Do NOT use chemicals or detergents to clean the speaker.
- Do NOT scrape the surface with sharp objects.
- Do NOT make any unauthorized alterations to the product.

Troubleshooting

Cannot Power On
Charge speaker with provided USB cable. The LED illuminates red when the speaker is charging.

Cannot Connect with portable device

- The speaker is in pairing mode when the LED indicator is blinking a blue light.
- The Disc Jockey is within 10m from the device.
- The portable device supports the A2DP profile.

No Sound

- Make sure the music volume is at an audible level on the portable device and Disc Jockey.
- Make sure the portable device is successfully paired with the speaker, the LED indicator will be a solid blue light.

Poor Sound Quality or Skipping
Move the portable device closer to the speaker or remove any obstacle between them to improve the Bluetooth signal.

Customer Service: (800) 423-3537
www.bushnell.com

©2021 Bushnell Outdoor Products

WARNING: This product uses a Lithium based battery. Lithium batteries can overheat and cause damage if physically abused. Do not use batteries that are damaged or show signs of physical wear.

WARNING: Fire Hazard! Do not short-circuit batteries. Batteries may overheat or explode.

WARNING: Danger to life. Keep batteries out of the reach of pets and children. If swallowed, seek medical advice immediately.

WARNING: Do not expose batteries to water or fire. Do not attempt to charge non-rechargeable batteries. The batteries may explode.

FCC ID: 2ASQI-DJ1BTS
IC: 24886-DJ1BTS

FCC Statement
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. Specifications and designs are subject to change without any notice or obligation on the part of the manufacturer.

Disposal of Electric and Electronic Equipment
(Applicable in the EU and other European countries with separate collection systems)

This equipment contains electric and/or electronic parts and must therefore not be disposed of as normal household waste. Instead, it should be disposed at the respective collection points for recycling provided by the communities. For you, this is free of charge. If the equipment contains exchangeable (rechargeable) batteries, these too must be removed before and, if necessary, in turn be disposed of according to the relevant regulations (see also the respective comments in this unit's instructions). Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.

